


A-MTK VMS

PC Windows VMS Software

Key Features:

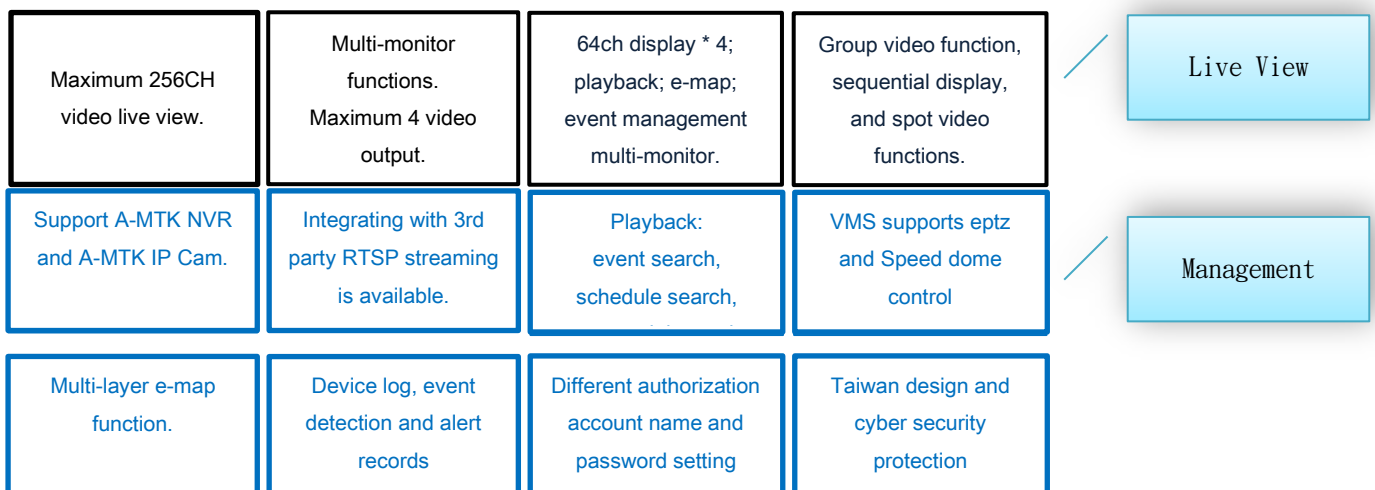


■ Software Functions:

Feature	Description
Support list	A-MTK Embedded NVR A-MTK Windows™ base NVR A-MTK IP cameras
Live Preview	64CH IP cam live view on single monitor Multi-monitor functions supports max. 256CH live view simultaneously Preview by NVR or User defined Group 1 / 4 / 6 / 9 / 16 / 64 division Support Low bit-rate streaming Full Screen Digital zoom Dynamic switch display camera on screen Sort NVR or Group in list Snapshot

	Play sound from focus channel Division Group function
Remote Playback	Playback by NVR or Camera Group Support Low bit-rate streaming Search by Date and Time , Record Type Motion Search Sequential Search 1 / 4 / 6 / 9 / 16 Divisions Full Screen Digital zoom Snapshot all or snapshot focus channel Dynamic switch display camera on screen Forward / Reverse / Pause / Stop / pre-frame / Next Frame Play speed : 1/4x , 1/2x , 1x , 2x, 4x, 8x, 16x, 32x Batch backup Batch convert to AVI Audio: Live / Playback / Mute Selectable display channel information
Remote Display control	Switch NVR's Division Switch NVR's Full Screen status Switch NVR's Display style Switch NVR's Displayed cameras
Event	NVR and IP camera event trigger TCP notify, event video upload, Pop up on camera list and eMAP HDD S.M.A.R.T detection and audio alert User defined HDD capacity full notify alert
e-MAP function	3 layers eMAP Support Bitmap map and Google Map (live)
Friendly user interface	Multi-style selectable User define control pads placement Support Multi-language(Unicode)
PTZ	PTZ control PTZ speed Goto preset Tour IRIS / Focus control Auto Pan
NVR management	Add / modify / remove NVR setting Auto Synchronous NVR's Channels setting NVR remote setting
Group Management	Add / Modify / Remove Group Add / Modify / Remove Cameras in Group Select camera from NVR list
User Management	Admin / User group permission User privilege by functions Auto login
Maintenance	Setting Backup and Restore Day/Time adjust manually , NTP Video convert to AVT and retrieve

■ 256CH VMS Setup Structure:

1. Video connected:

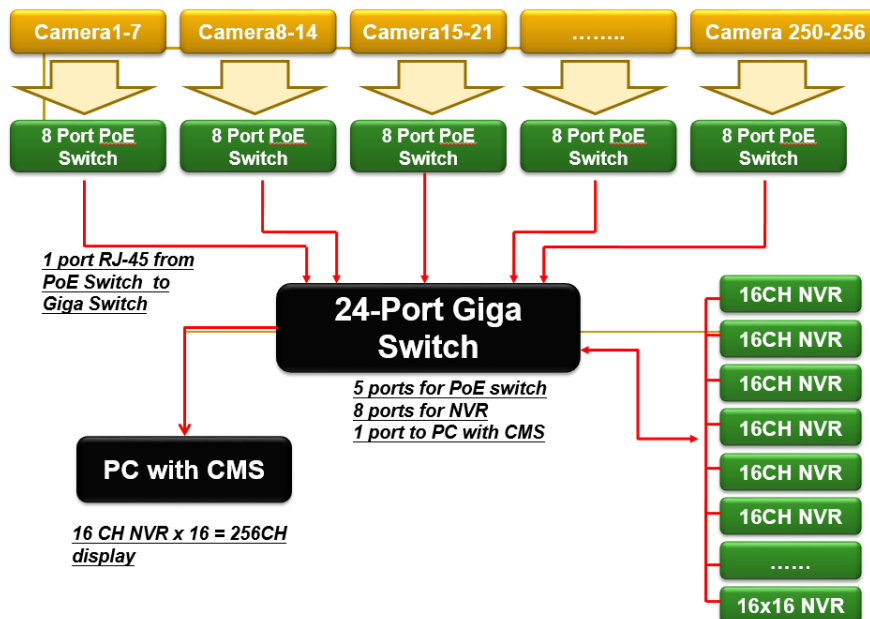

2. eMAP Function:

CMS has 3 layers eMap, that will easy to management a lots of cameras.

Each layer could add several sub-layer, and each layer could add many camera, and you could move camera to any position on the map.

Live Preview:

Select a map from list, the map will shown on the dialog, double click on the camera icon that you need to preview, eMap will pop-up a new preview widow with selected camera's video.

